



## Front Bumper Installation Directions

### Pre Install:

· Inspect the packaging and product for signs of damage and report immediately to carrier. Keep all packaging for filing a damage claim if needed. Jeeperman, LLC is not responsible for shipping damages!

This is a fairly straight forward installation for most owners taking about 1 hour. If after reading the installation you do not feel confident in the procedure, we strongly recommend taking this to a competent shop to ensure proper installation for years of trouble free service.

It would be advisable to read these instructions, in their entirety, BEFORE starting the installation. If you are uncomfortable with this, please e-mail or contact us or seek a qualified professional installer.

### Kit Contents:

1 – Front Bumper  
And these instructions

### Required tools and supplies:

SAE Wrenches  
TORX Wrenches  
Lok-Tite thread locker

· Familiarize yourself with the parts. Verify all parts and hardware are accounted for and contact us for any replacements.

### The Installation:

These installation directions are furnished as a guide; your vehicle may vary.

Items that have been modified are not returnable or exchangeable so verify compatibility first.

· Remove any existing accessories such as lights or winches and mounts. Remove existing bumpers bolts and remove bumper. Most newer Wranglers will have 6- T-55 Torx bolts that may be re used for mounting new bumper. Remove plastic sway bar cover if so equipped. This cover may need to be removed or slightly trimmed down if re used with the Jeeperman bumper. See image for more on this.

· If installing a winch at this time it may be easier; provided you have a helper, to pre-install the winch and fairlead per manufactures instructions. Most winches are secured to our winch plate built into the bumper with 4 bolts and 2 more for the fairlead.

· Position the bumper (and tow hooks and light hoop if installing at this time) onto the frame rails. Install all bolts loosely to allow for minor movement until all bolts are in place. Once all bolts are in place then tighten all to 40 ft. lbs with a small amount of Lok-Tite on the threads.

· Install and wire any lights and finish-installing winch wiring if applicable. Re-install sway bar cover if desired. Install any other accessories such as D-rings and license plate as required. The plate can either be installed using an aftermarket clip on style mount over the fairlead or can be positioned under the fairlead bracket and the fairlead if running a winch.

(Shown with optional light hoop and D-rings from Jeeperman)

See website [www.Jeeperman.com](http://www.Jeeperman.com) for any product updates.

If you have any questions or concerns about the product or installation, feel free to contact tech support at 509-340-3911 or [info@jeeperman.com](mailto:info@jeeperman.com). We also welcome your feedback and input.

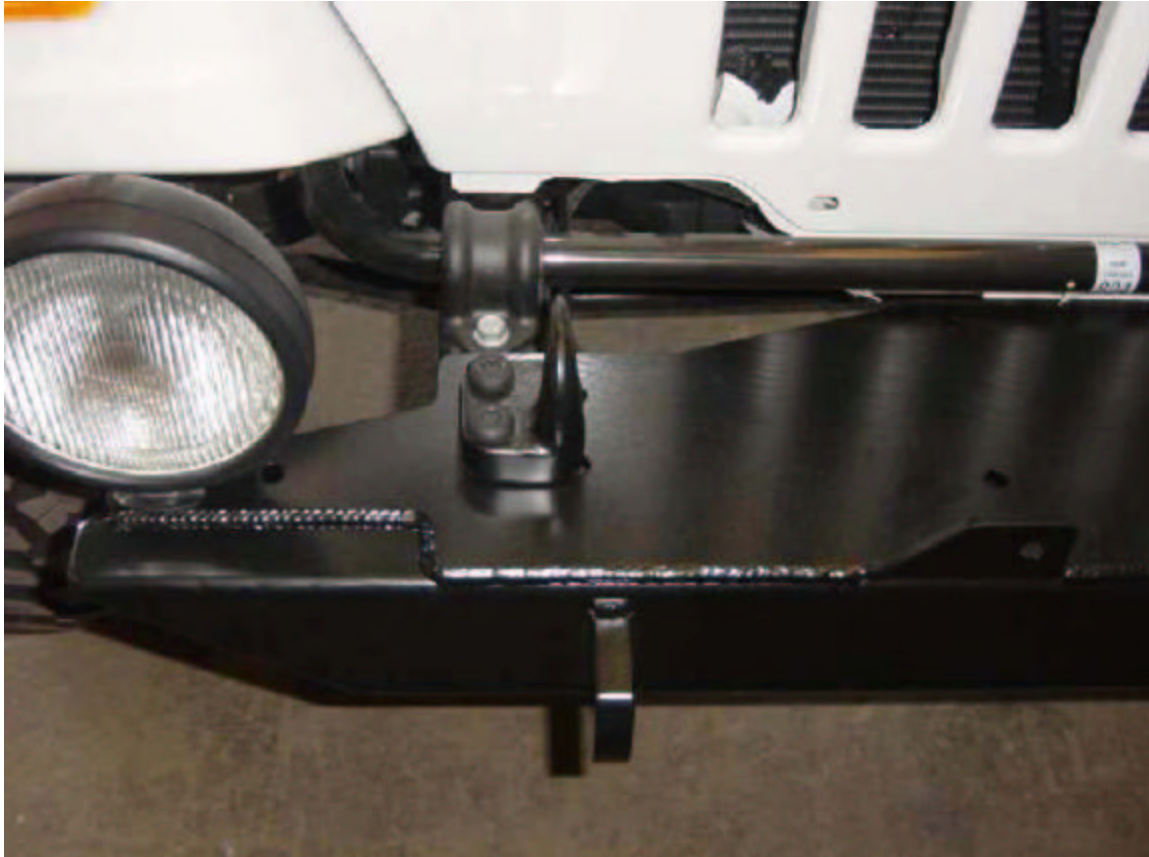


PHOTO 1



PHOTO 2