



JBK, JBK1 and JBK2 Installation Directions

Pre Install:

· Inspect the packaging and product for signs of damage and report immediately to carrier. Keep all packaging for filing a damage claim if needed. Jeeperman, LLC is not responsible for shipping damages!

This is a fairly straight forward installation for most owners taking about 15 minutes. If after reading the installation you do not feel confident in the procedure, we strongly recommend taking this to a competent shop to ensure proper installation for years of trouble free service.

It would be advisable to read these instructions, in their entirety, BEFORE starting the installation. If you are uncomfortable with this, please e-mail or contact us or seek a qualified professional installer.

Kit Contents:

1 – LED Light
1 – 5' Length of 2 Conductor Wire
4 – Self Tapping Screws
4 – Wire Clips
2 – Wire Ties
2 – Wire Taps
2 – Stickers
And these instructions

Required tools and supplies:

Wire Stripper/Crimper
Wire Connectors or Soldering Gun
Electrical Tape
Multi-Meter
Clear Silicone Adhesive

· Familiarize yourself with the parts. Verify all parts and hardware are accounted for and contact us for any replacements.

The Installation:

These installation directions are furnished as a guide; your vehicle may vary. Always use a no-load style digital multi-meter on air bag equipped vehicles!

· Feed up a long wire or fish tape from the opening in the center backside of the Jeeperman swingaway (a straightened coat hanger will work well for this). Once you get the wire to the opening of the wheel mount plate, tape the dual wire lead to the previously fished wire and carefully pull the LED's wire assembly down; leaving plug end a few inches out the back of the swingaway opening. This may take some patience, as it is tight tolerance, but can be done usually in a few tries. Plug the connector into the light housing (JBK and JBK1).

JBK/JBK1

- Apply silicon with enough material to get a good waterproof seal with the wheel plate. Press the light assembly into position on the carrier through the opening in the middle of the wheel. Tape the light into place and allow curing per silicone MFR directions.

JBK2

- Press the light/grommet assembly into position on the carrier through the opening in the middle of the wheel mount. Apply enough pressure to get a good waterproof seal with the grommet and affix the LED in place.

- On the newer Wranglers you will be able to access the brake wire plugs before they go into the body/tailgate pin switch. On the passenger side plastic dust cover (below the rear taillight and behind the rear wheel) one may easily unplug from the pin switch to the tailgate and pull down. Be sure to test the polarity and ensure that the wires are connected positive-positive and negative-negative. Unplug, strip and solder or use bullet type connectors to wire the LED light to the OEM wiring (usually black and white wires). Test the light does come on and then use the supplied wire ties to secure the wiring properly, be sure to test tire carrier operation that wires do not bind or get pinched.

- Replace the rear quarter panel dust cover.

See website www.Jeeperman.com for any product updates.

If you have any questions or concerns about the product or installation, feel free to contact tech support at 509-340-3911 or info@jeeperman.com. We also welcome your feedback and input.



PHOTO 1

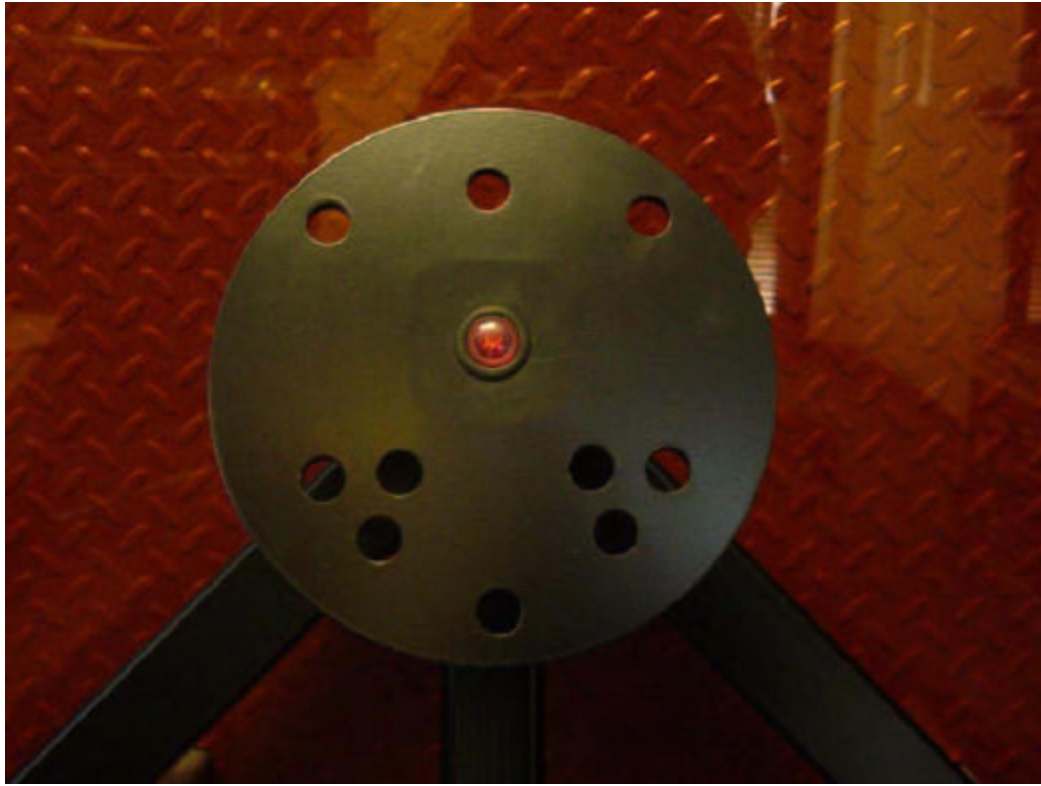


PHOTO 2



PHOTO 3